


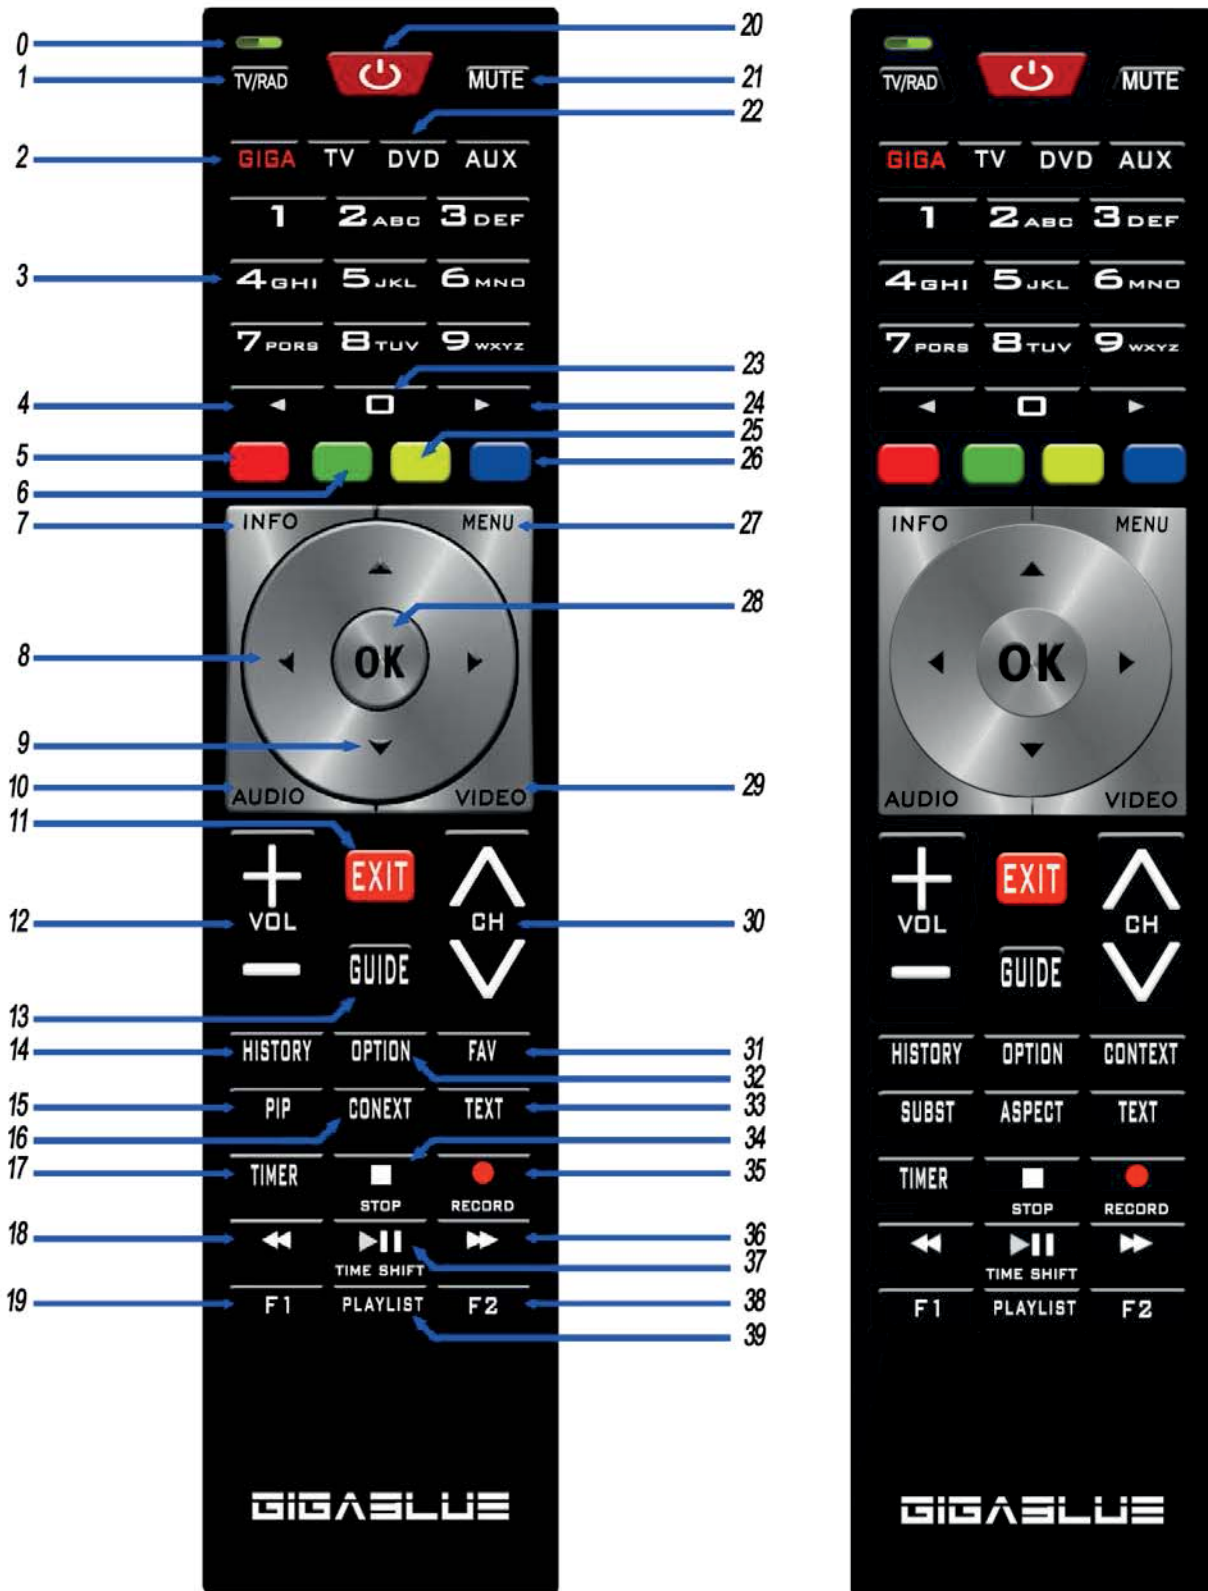



 
GIGABLU

RCU Manuel

Instruction for keyboard remote



Funktionen der Fernbedienung

1. Battery Control LED
2. switching TV/Radio
3. Giga , TV, Aux, DVD
4. Number field Film archive
5. Block of ten ◀
6. Red Function button
7. Save / subchannels / Extensions
8. Info button, info about the received channel
9. Arrowbutton ◀ left and ▶ right
10. Bouquetliste/ Call up the channel list
11. AUDIO button / Select audio track
12. EXIT button
13. Volume ▲+ ▼ –
14. EPG (Electronic Programm Guide)
15. HISTORY button
16. PiP (picture in picture button)
17. CONTEXT button
18. Timer button
19. Control button ◀◀ Backward button
20. HDMI in button
21. POWER button on/off
22. Ton on/off
23. Universal Function button for TV, AUX, DVD
24. Return to the previous channel 0
25. Block of ten ▶
26. Yellow function button / Timeshift start 
27. Blue button Call BluePanel or press 2 x PiP
28. MENU Button
29. OK Button
30. Recorded programs
31. Channel ▲+ ▼-
32. Context
33. Option button Sub-channels / Subtitle
34. Calling up the video memo / Virtual keyboard
35. Stop button
36. Record button 
37. Control button ▶▶ Forward
38. Timeshift start 
39. PiP button
40. HDD Archive Media Player Musik / Video / Picture

Achtung wenn GigaBlue Fernbedienung, GigaBlue Box nicht bedient, bitte drücken Sie auf die GIGA Taste

Before using the remote control, you need to carry out one of the following steps first:

Set up for TV universal remote (for remote side)

A. Set up by Brand Code

1. Switch on the device for which you wish to use the remote control (e.g. TV set).
2. Find the code number of your device brand in the code list (e.g. Lifetec 0050) from the relevant device group (TV).
3. Press and hold the device button (e.g. TV) for three seconds. Release the device button as soon as LED lights up, now it is in set up mode.
4. Enter the 4-digit device code (e.g. 0050 for Lifetec TV) within 10 seconds. If an entry is not made within 10 seconds, the set-up mode is automatically terminated.
5. The LED turns off if the remote accepts the code. If the LED flashes two times, that means the code may be wrong, and the remote control remains in set-up mode, enter the correct code from the list again.
6. Check the function of the buttons on the remote control. If it does not function correctly, try another 4-digit device code (e.g. 0057...) from the list under the same brand. Repeat steps 3 to 6 until all the basic functions operate correctly.

Note: Exit the set-up mode by pressing the device button, or the set-up mode is automatically terminated if no button is pressed for 10 seconds.

B. Set up by Automatic Search

If setting up by brand name and codes is not successful, or you can not find your brand name in the code list, you can use the Automatic Search function to find the correct code for your remote control.

1. Switch on the device that you like to control. If it is a VCR, insert a cassette.
2. Point the remote control at your device. Press the device button (e.g. TV) for three seconds, the LED turns on, keep pressing the device button for about two seconds until the LED starts flashing, that means it is in Automatic Search now and you can release the device button.
3. The "Volume+" signal is automatically transmitted from the remote control to the device (code scan). As soon as the volume of the device (e.g. TV) changes, immediately press the device key to stop the Automatic Search.
4. If the device you are searching for is a CD player, Tuner, TAPE, or AUX, a power signal is automatically transmitted from the remote control to the device. As soon as the device turns off, press the device key to stop the Search. You need to turn on the device by pressing the Power button before you can check the functions of the other buttons.
5. Check the functions of the other buttons on the remote control. If none of the buttons function (i.e. the search cannot be stopped at the correct time) or the majority of the buttons do not function correctly, restart the search (see steps 2 to 4) to find a suitable code. If the majority of the buttons function correctly, set-up has been successful. Re-press the device button (e.g. TV) to save the code and to terminate the set-up mode.

C. Set up by Manual Search

If setting up with brand name and codes is unsuccessful, you can also use the "Manual Search" to find the correct code for operating your device.

1. Switch on the device that you like to control. If it is a VCR, please insert a cassette.
2. Point the remote control at the device. Press and hold the device button (e.g. TV) for 3 seconds. The LED lights up and the remote is in manual set-up mode, release the device button now.

3. Press the "Volume+" button approx. every 1.5 seconds.
4. As soon as the volume of the device (e.g. TV) changes or the device turns off, check whether the other buttons on the remote control function correctly. If the majority of the buttons does not function correctly, press the Volume+ approx. every 1.5 seconds to initiate the reactive code (manual search is continued, see step 3 to 4). If the majority of the buttons on the remote control functions correctly, save the code by pressing the device button (e.g. TV) to terminate the manual search.

Note: The Manual Search is automatically terminated if no entry occurs during a 30 seconds period.

Note:

1. Point the IR transmitter of the original remote control to face the IR receiver of the keyboard remote with approximately 30mm between them. Hold the two remotes in a straight line to make the learning process more accurate.
2. When you cannot choose any more buttons on the new universal remote control for learning, it means the memory is full.

D. Display the code

- 1 Press and hold the device button (TV) and simultaneously press button 1 to display the thousands of the 4-digit code. Count how often the LED flashes, if the LED does not flash, the number is zero.
- 2 Press and hold the device button (TV), simultaneously press button 2 to display the hundreds of the 4-digit code, Count how often the LED flashes, if the LED does not flash, the number is zero.
- 3 Press and hold the device button (TV), simultaneously press button 3 to display the tens of the 4-digit code, Count how often the LED flashes, if the LED does not flash, the number is zero.
- 4 Press and hold the device button (TV), simultaneously press button 4 to display the ones of the 4-digit code, Count how often the LED flashes.

For example for Code 0169

1. Press TV and 1 LED flashes zero times
2. Press TV and 2 LED flashes one time
3. Press TV and 3 LED flashes six times
4. Press TV and 4 LED flashes nine times

F. Reset / Delete Function

Simply press the device (TV) button and Button 0 together, when the LED flashes three times, all settings will be deleted, and the remote goes back to factory default settings.

GigaBlue Support

Beim Giesshaus 7

DE 25348 Glückstadt

www.gigablue.de

sales@gigablue.de

Tel. +49 4124 937262

Fax. +49 4124 937266

TV

@DIKON 1551,1525,
A.R. SYSTEM 0237,0544,0322,0513,0540,0246,
ACCENT 0322,0359,1637,0540,0131,
ACCUPHASE 0540
ACEC 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
ACER 6487,6915,
ACTION 0359
ADMIRAL 0024,0080,0359,0428,0429,0222,
ADYSON 0359,0329,0067,0505,
AEA 0540,0513,
AEG 6404,6450,6502,6503,6506,6508,6522,6525,6529,6548,6553,6555,
6846,6931,
AG 0557
AGASHI 0359,0322,0111,0513,
AGB 0242,0095,0119,0229,0094,0090,0092,0051,0052,0513,0181,0055,
0025,0024,
AGEF 0262,0540,0242,0359,0336,0363,1611,0024,0077,0311,
AIKO 0262,0359,0067,1608,0513,
AIM 0540,0329,0539,0354,0237,0513,1302,
AIOSTAY 0136
AIWA 1038,0581,0513,
AKAI 0067,0070,0374,0103,0111,0143,0162,0262,0290,0296,0298,0337,
0345,0354,0359,0361,0375,0415,0431,0222,0515,0549,0556,0558,
1243,1311,1314,1396,1423,0540,0513,1652,0230,1684,
AKI 1638,0513,
AKIBA 0540,0513,0262,
AKIO 1139,1318,
AKIRA 1485,1637,0141,0374,0513,
AKITA 0065,0127,0195,0196,0262,0300,0322,0329,0359,0407,0409,0415,
0418,0447,0472,0544,0556,0557,0513,1009,0141,1368,1422,0540,
AKITO 0540,0513,
AKTRON 0513,0197,0207,0296,0337,0557,1423,1608,0467,0351,
AKURA 0143,0231,0190,0359,0322,1637,0513,0540,
ALBA 0415,0300,0262,0230,0513,0359,
ALBATRON 1378
ALBIRAL 0025,0237,0513,0262,0322,0125,0230,1174,1639,
ALBRECHT 1586
ALHORI 0067
ALKOS 0513,0197,0207,0296,0337,0557,1423,1608,0467,0351,
ALL TEL 0550,0513,0145,1383,
ALLORGAN 0391,0108,0067,
ALTEK 1494,1399,1526,1401,1395,1546,
ALTUS 0557
AMBRSSADOR 0196

AMPLIVISION 0067,0237,
AMSTRAD 0143,0196,0222,0262,0322,0359,0415,0513,1343,1410,1423,0540,
1440,1469,1559,1578,1587,1588,1638,1639,1666,1711,
ANAM 0540,0513,
ANEX 1639,0513,
ANGLO 0322,0359,
ANIS 0322,0336,
ANITECH 0111,0513,0077,0359,0505,0322,0424,0329,0114,0540,
ANSONIC 0322,1657,0336,0057,0359,0077,0141,0513,
ANTECNO 0262
AOC 1540
AQP 0096,0103,0157,0295,0327,0335,0549,1450,1491,1649,1652,1692,
0351,1702,
ARC EN CIEL 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
ARCAM 0067
ARCELIK 0141,0230,0557,
ARDEM 0141,0513,0336,0557,
ARGENTINA 0572,1711,0569,
ARISTONA 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
ARPHONE 0246,0114,0025,0230,0359,0513,
ARTHUR MARTIN 0075,0080,0082,0083,0137,0540,0178,0162,0513,0390,0431,0539,
0556,1016,0230,1702,0222,
ART-TECH 0359,1638,0424,0513,
ASA 0136,0066,0222,0390,0282,0513,
AS-BERG 0131,0077,0302,0374,0513,
ASORA 0322
ASTHON 1638,0415,0114,0490,0131,1639,0136,1657,1658,0230,1363,0125,
0097,0513,0077,0024,1227,0111,0327,0547,0196,0067,1317,0336,
ASTRA 0415,0329,0296,0302,0359,0067,0354,1485,
ASTRO SOUND 0237,0230,
ASUKA 0067,0322,0262,0230,
ATAKI 0424
ATLANTIC 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
ATORI 0359
AUDIOLA 1432
AUDIOSONIC 0359,0141,0262,0125,0149,0111,1638,0067,0025,1227,0077,0230,
0162,0322,0060,0490,0424,0336,0354,0545,0540,0513,0557,1657,
AUDIOTON 0114,0359,0067,0125,
AUDIOVOX 0572
AURORA 0024,0067,0354,
AUSIND 0131,0136,1126,
AUTOVOX 1423,0067,0136,0131,1124,0391,1126,1653,0108,1367,0556,1395,
0513,0111,
AUVISAT 0513

AVIOUS 1550
AWA 0149,0359,0067,0354,0540,0513,
AWATRON 0359
AXXWNT 0513
BAIRD 0375,0378,0539,
BANG & OLPFSEN 6432,6588,6589,
BARCO 0146,0024,0090,
BARCOM 0329
BASIC LINE 0203,0262,1423,0424,0097,0513,0354,0539,0557,0230,0359,0141,
BASTIDE 0067
BAUER 0561,1302,0513,0069,0275,0114,
BAUMATIC 0322
BAUR 0111,0083,0103,0133,0157,0162,0178,0290,0337,0351,0540,0359,
0391,0434,0467,0528,0174,0513,1637,1652,0495
BAZIN 0067,0441,
BEAUMARK 0547
BEKNTEKNIK 0337,0207,1657,
BEKO 0141,0207,0227,0230,0336,0496,0540,0513,1435,0557,
BENNET 0540,0513,
BENSTEN 1511,0550,0145,1491,
BEON 0540,0513,
BEST 0556
BESTAR 1657,0114,0415,0359,0540,0336,0513,0435,
BIAZET 0513,0052,
BIFONIC 0067,0359,
BIGSTON 0354,0359,0322,
BINATONE 0067
BLACK DIAMOND 0513,0540,
BLACK STRIP 1608
BLACKSTAR 0262
BLACKTRON 0262
BLACKWAY 0351,0262,
BLAUPUNKT 6143,6425,6432,6481,6522,6525,6548,6553,6811,6965,6969,6972,
BLAUSONIC 0067
BLOOM 0540,0513,0556,1399,1433,1390,1386,
BLUE SKY 0556,0557,1423,0051,0097,0513,0540,0549,0065,0141,0262,0467,
BLUE STAR 0230
BOCA 0143,0196,0222,0262,0322,0359,0415,0513,1343,1410,1423,0540,
1440,1469,1559,1578,1587,1588,1638,1639,1666,1711,
BONDSTEC 0125
BOOTS 0067
BOSCH/BAUER 0069
BOSTON 1621,0067,
BPL 0540,0513,
BRANDT 1435,0051,
BRANDT ELECTRONIQUE
0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,

BRAUN 0067
BRENDSTAR 0359
BRIGMTON 0067,0111,0237,
BRINKMANN 0540,0513,
BRIONVEGA 1622,0295,0247,1367,1124,0024,0111,0428,0223,0222,1181,
BRITANNIA 0067,0162,
BROKLINE 1319
BROKSONIC 0513,1323,
BROTHER 0322,0513,
BROWN 1317
BRUNS 0262,0540,0242,0359,0336,1611,0024,0363,0077,0311,
BSR 0300,0052,0329,0230,
BTC 0262
BUSH 0097,0052,0083,0513,
CADMOS 0513,0246,0114,0025,0230,0359,1319,
CALIFORNIA 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
CAMPER 0230,0336,0513,0141,
CANAIS 0042
CANALERA 1363
CANALSANTE 0230
CANDLE 0075,0082,0083,0111,0067,0125,0141,0145,0153,0052,0227,0277,
0275,0329,0540,0359,0384,0557,0561,0925,0547,1459,1498,1476,
0513,1607,0542,1614,0230,3044,4206,4207,
CANTON 0252
CAPSONIC 0322,0513,
CARAD 0540,0513,
CARENA 0544,0513,0540,
CARREFOUR 0540,0513,
CARYONSE 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
CASCADE 0540,0513,
CASIO 1611,0540,0409,
CASONIO 0062,0083,0162,0178,0203,0204,0251,0252,0431,0539,0052,1654,
0222,2356,4340,4341,
CAT 4575,1410,
CATHAT 0540,0513,
CCE 0540,0513,
CDV 1410
CELINT 0052
CENTURION 0540,0513,
CENTURY 0057,0024,1227,
CGE 0057,0131,0227,0298,1711,0374,0513,1638,0230,
CGM 0097,0227,0322,0336,0359,0424,0513,0064,1657,0230,
CIE 0060,0196,0262,0354,0359,0513,
CIHAN 0230,0115,
CIMLINE 0359

CINEMA 0513
CITIZEN 1324
CITY 0359
CLARITRONIC 1657
CLARIVOX 0024,0025,0096,0111,0204,0237,0490,0540,0230,1611,
CLATRONIC 0540
CLAYTON 0230,0513,
CMX/Commax 6274,6639,6690,6764,6810,6813,6819,6840,6846,6863,6907,
COFANDEL 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
COLOR MAT 0024
COLUMBIA 0111
COMBITECH 0065,0127,0195,0196,0262,0300,0322,0329,0359,0407,0409,0415,
0418,0447,0472,0544,0556,0557,0513,1009,0141,1368,1422,0540,
COMET 0540,0556,0536,0262,0513,
COMPUTRON 0431,0415,0359,0513,
CONCERTO 0075,0082,0083,0111,0067,0125,0141,0145,0153,0052,0227,0277,
0275,0329,0540,0359,0384,0557,0561,0925,0547,1459,1498,1476,
0513,1607,0542,1614,0230,3044,4206,4207,
CONCORDE 0359
CONDOR 0114,0131,0227,0337,0322,0359,0374,0424,0513,0540,
CONFORAMA 0431
CONIC 0329,0296,
CONRAC 1435
CONRAD 0513
CONTEC 0322,0359,0197,0067,0540,0424,
CONTI M. 0513
CONTIN. EDIS. 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
CONTINENTAL 0549,1639,0513,0114,
COSMEL 0359,0490,0513,0540,
COSMOS 0513,0359,0262,
CRC 0111
CROSLEY 0115,0057,0024,0131,
CROWN 0540,0374,1639,1657,0336,0359,0262,0057,0513,0131,0077,0097,
0141,1420,
CRYSTAL 0111,0513,
CS ELECTRONICS 0125,0067,0262,
CTC CLATRONIC 0057,0322,0114,0374,1423,0067,0230,0262,0415,0359,0513,0077,
0557,0540,0227,0131,0424,
CXC 1638,0415,0114,0490,0131,1639,0136,1657,1658,0230,1363,0125,
0097,0513,0077,0024,1227,0111,0327,0547,0196,0067,1317,0336,
CYBERTRON 0262
CYMATIC 0067,0025,0230,
CYV 0513
D -VISION 0554,0513,0540,
DAEWOO 0060,0067,0111,0354,0359,0361,0375,0502,0513,0545,0554,0557,
1390,1412,1450,1453,1574,1601,1613,0540,

DAICHI 0540,0359,
DAIMOND 1637
DAINICHI 0067,0262,
DALMAN 1453
DANSAI 0329,1608,0513,0067,
DANTAX 1423,0513,
DATRONIC 0060,0067,0111,0354,0359,0361,0375,0502,0513,0545,0554,0557,
1390,1412,1450,1453,1574,1601,1613,0540,
DAWA 0513
DAYMATER 0024,0025,0060,0077,0115,0359,1009,1639,0230,
DAYTEK 1121,0572,0513,
DAYTRON 0359,0540,0513,1318,
DAYTRONIC 0060,0067,0111,0354,0359,0361,0375,0502,0513,0545,0554,0557,
1390,1412,1450,1453,1574,1601,1613,0540,
DCE 0557
DE GRAAF 0513
DECCA 0065,0067,0111,1637,0246,0254,0302,0375,0540,0513,
DEITRON 0540,0513,
DELTON 0557
DEMACOLOR 0513
DENKO 0322
DENTAL 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
DENVER 1546,0359,1638,0513,1522,
DESMET 0246,0114,0025,0230,0359,0513,
DEWO 1085
DHS 0415,0329,0296,0302,0359,0067,0354,1485,
DIADEM 0222
DIAMAT 0540,0513,
DIAMOND 0359,0354,1264,1112,1121,1241,0513,0540,1338,0047,
DIBOSS 0513
DIFFE 1514
DIGATRON 0540,0513,
DIGIHOME 1435,0557,
DIGILINE 0513
DIGITOR 0513,0540,
DIK 0540,0513,0359,
DIKON 1551
DINASTY 0359,0354,0513,
DISTAR 1085,0513,
DIXI 0513,0540,1611,0359,
DMTECH 1489
DOMEOS 0513,0434,
DOMLAND 0047,0057,0097,0111,0067,0125,0133,0141,0153,0052,0162,0196,
0540,0222,0298,0312,0329,0354,0359,0391,0409,0434,0513,0230,
2315,
DOMOH 1639,0513,
DORIC 0052

DTS 0359,0513,0153,
DUAL-TEC 0047,0057,0097,0111,0067,0125,0133,0141,0153,0052,0162,0196,
0540,0222,0298,0312,0329,0354,0359,0391,0409,0434,0513,0230,
2315,
DUMONT 0390,0066,0374,0131,0282,0077,0115,1639,0513,0136,0024,
DUNAI 0230
DURABRND 0557,0513,
DUX 0111,0540,
DYNAMTC 0359,0374,
DYNATRON 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
EASY LICING 1525,1394,1398,1399,
ECCO 1346
ECHO 0561
EHOSTAR 0359,0513,0067,
ECO LINE 0513
EDAN LINE 0513
EDISON 0549
EI 0230,0162,0513,1423,1657,0227,
EL 1525
ELBE 0428,0295,0528,0073,0067,0429,0237,0233,0025,0230,0513,0222,
0255,1595,1594,1410,1453,0540,1450,
ELCIT 0024,0025,0060,0077,0115,0359,1009,1639,0230,
ELECTRO TECH 0359
ELEKTA 0359,0424,0322,0354,0111,0513,
ELEKTRONIKA 1657,0516,
ELEKTRONSKA IND. 0025,0230,
ELEMIS 0230,0513,0336,
ELG 0540,0513,
ELIN 0111,0359,0513,0067,0153,0162,0282,0083,0066,0431,
ELITE 0262,0322,0114,0513,
ELLEVISION 0322,0527,
ELMAN 0025,0230,0077,0196,0067,1700,
ELSAY 0513
ELTA 0359,0435,0057,0067,0322,0513,
EMATEC 0062,0083,0162,0178,0203,0204,0251,0252,0431,0539,0052,1654,
0222,2356,4340,4341,
EMCO 0057,0060,0131,0227,0298,0374,0435,0540,1227,0467,0513,0230,
EMERSON 1638,0415,0114,0490,0131,1639,0136,1657,1658,0230,1363,0125,
0097,0513,0077,0024,1227,0111,0327,0547,0196,0067,1317,0336,
ENGEL 1563,0230,1611,
ENIE 0513
ENZER 0579,0513,0561,1485,
EROICA 0329
ERRES 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,

ESC 0067,0539,0336,0513,0540,
ESTEL 0230
ETRON 0230,0384,1082,0359,0513,0415,1063,
EULANDER 0428,0295,0528,0073,0067,0429,0237,0233,0025,0230,0513,0222,
0255,1595,1594,1410,1453,0540,1450,
EUMIG 0114
EUROCOM 0230
EUROLINE 0513,0540,
EUROMAN 0111,0322,0513,0067,0336,
EUROPA 0540,0513,
EUROPHON 0067,0025,0077,1227,0114,0127,0238,0230,
EUROSTATUS 0513
EUROVISION 1423
EVELUX 0513
EXCEL 0540,0513,
EXPERT 0153,0204,1654,
EXQUISIT 0540,0513,
FAGOR 0513,0435,
FAIRMOST 0359
FALCON 0359
FAMILY LIFE 0540,0513,
FELIX 0262,0322,0415,0513,
FENNER 0359,0424,0513,0540,0544,0354,0111,0516,
FERGUSON 0051,0217,0229,0237,0242,0254,0302,0378,0455,0513,1616,0322,
1700,
FIDELIS 0067,0296,0359,0513,
FIDELITY 0391,0067,0329,1713,0359,0415,1637,0513,0262,
FILSAI 0359,0067,
FINLANDIA 0083
FINLUX 0066,0077,0115,0127,0131,0136,0137,0230,0246,0282,0295,0359,
0374,0375,0390,0431,0513,0556,0558,1126,0557,0540,0222,
FIRST LINE 0237,0359,0354,1453,0391,0111,0302,0375,0067,0057,0097,1654,
0540,0298,0114,0539,0222,0513,0557,0230,1435,0203,1637,1009,
1420,
FISHER 0363,0133,0066,0067,0314,0115,0197,0149,0290,0024,1657,0391,
0539,1658,0572,
FLINT 0513,0073,0544,
FLORIDA 0067
FNR 0077
FORGESTONE 0051,0217,0229,0237,0242,0254,0302,0378,0455,0513,1616,0322,
1700,
FORMENTI 0025,0067,0083,0111,0114,0136,0540,0196,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
FORTRESS 0024
FRABA 0513
FRIAC 0077,0540,0513,
FRONTECH 0083,0057,0329,0359,0125,0230,
FS SOUND 0359

FST 0065,0067,0111,1637,0246,0254,0302,0375,0540,0513,
FUJI 0424
FUJITECH 0513,0111,
FUJITSU 0077,0329,0067,0153,0108,0052,0282,0222,1283,1408,1345,0513,
FUMEO 0052
FUNAI 6138,6278,6408,6410,6415,6422,6428,6450,6485,6502,6506,6583,
6670,6871,6872,6930,
FURICHI 1338
FUSION 1435,0557,
FUTRONIC 0322
FUTURE 0540,0513,
FUTURETECH 1638,0415,0114,0490,0131,1639,0136,1657,1658,0230,1363,0125,
0097,0513,0077,0024,1227,0111,0327,0547,0196,0067,1317,0336,
GALA 0329,0296,
GALACTEX 0067,0322,
GALANT 0359,0415,0424,
GALAXI 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
GALAXY - GALAXIS 0409,0057,0227,0374,0513,0067,
GALERIA 0359
GBC 0262,0230,0359,0513,0375,0354,1489,0125,0197,0415,0060,0424,
0115,
GE 0242,0547,0051,
GEANT CASONTO 0062,0083,0162,0178,0203,0204,0251,0252,0431,0539,0052,1654,
0222,2356,4340,4341,
GEBER 0162
GEC 0052,0067,1076,0083,0246,0375,1714,0189,0513,1372,
GELOSO 0359,0262,0230,0115,0025,0080,0060,0354,
GEMSOUND 0359,0262,
GENERAL 0359,0067,0354,0111,0513,0540,0197,
GENERAL CORPORATION 0067,0108,0153,0513,
GENERAL TECHNIC 0354,0359,
GENESIS 0540,0513,
GENEXXA 0390,0162,0540,0262,
GERICOM 1383
GIANT 0067,0527,0111,0561,0359,
GITEM 0242,0513,0351,0111,
GM - GMC 0359,0513,0322,
GOLD 1526
GOLD TOP 0424
GOLDFUNK 0094
GOLDHAND 0359,0067,
GOLDLINE 0073
GOLDSTAR 0075,0082,0083,0111,0067,0125,0141,0145,0153,0052,0227,0277,
0275,0329,0540,0359,0384,0557,0561,0925,0547,1459,1498,1476,
0513,1607,0542,1614,0230,3044,4206,4207,
GOLDTECH 0097,0513,
GOLDVISION 0322,0359,0067,0513,0505,0424,0111,0557,

GOODMANS 0067,0359,0415,0051,0545,0557,0540,0262,0354,0111,0554,0327,
0322,0230,0242,1608,0141,0513,1423,0097,
GORENJE 0539,1657,0516,1658,1296,0513,1423,0051,
GPM 0322,0329,0262,0359,
GRADIENTE 0502
GRAETZ 0062,0066,0083,0096,0108,0111,0136,0149,0153,0162,0252,0290,
0322,0327,0374,0390,0391,0222,0513,0539,1423,1445,0052,1654,
1713,
GRANADA 0062,0066,0083,0096,0108,0111,0136,0149,0153,0162,0252,0290,
0322,0327,0374,0390,0391,0222,0513,0539,1423,1445,0052,1654,
1713,
GRANDEN 0025,0067,0083,0111,0114,0136,0540,0196,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
GRANDIN 1453,1654,0073,1548,1569,0544,0141,0424,1564,0230,0536,0114,
0262,0540,0422,1549,1412,1383,0557,0513,
GREAT WALL 0490,0322,
GRENADIER 0547,0513,0230,1174,
GRONIC 0238,1174,0067,0359,0230,
GRUNDIG 6139,6143,6226,6227,6228,6229,6231,6326,6400,6408,6410,6425,
6432,6439,6455,6461,6489,6492,6506,6507,6522,6523,6524,6525,
6528,6537,6540,6548,6553,6554,6587,6693,6702,6709,6861,6909,
6931,6932,6972,
GTRONIC 0495,0513,
GTT 0359,0424,1638,0374,0513,
GUTTA 0495
H & B 0513
HADOR 1338
HAIER 6170,6275,6279,6284,6455,6702,6725,6727,6811,6831,6846,
HALIFAX 0322
HAMMERSTEIN 0322,0067,0384,0422,1082,0359,
HAMPTON 0067,0115,
HANIMEX 0262
HANNOVER 1139,1420,
Hannsree 67216881
HANSEATIC 6138,6151,6152,6153,6432,6450,6454,6458,6459,6467,6505,6506,
6529,6530,6834,6941,6952,6000,6001,6002,6003
HANTAREX 0513,1436,1383,0077,0238,0359,0025,
HARROW 0513
HARWOOD 0540,0513,
HAUPPAGE 0540,0513,
HB 0557,0513,1489,1459,
HCM 0322,0359,0424,0513,0543,0540,0067,0230,
HEDZON 0540,0513,
HEIRU 0322
HELECTRONIC 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
HEMMERMANN 0391,0127,1009,0077,
HENA 0513

HEXA 0230,0204,
HIFIVOX 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
HIGASHI 0067
HIGHIWA 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
HIGHLINE 0540,0513,
HIKONA 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
HILINE 0359,0415,0513,0322,
HINARI 0322,0513,0329,0262,0327,0065,0359,0080,0363,
HISAWA 0513,0262,0073,0544,0557,
HISENSE 6840,6841,6842,6004,
HISHITO 0513,0197,0207,0296,0337,0557,1423,1608,0467,0351,
HISONIX 0359,0415,
HIT 0024
HITACHI 6151,6152,6182,6376,6380,6403,6422,6426,6432,6438,6440,6444,
6454,6455,6460,6471,6481,6485,6486,6487,6488,6730,6746,6764,
6780,6781,6783,6784,6785,6786,6787,6788,6789,6790,6791,6792,
6793,6794,6795,6796,
HITSU 0262,0544,0073,0513,
HOHER 0513,0540,0557,1383,1423,
HOME ELECTRONICS 1437
HORIZONT 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
HORNYPHON 0540,0513,
HOSHAI 0097,0424,0262,0513,
HOSPITALIERE 0513
HOWELL 0513
Humax 6.14668E+23
HYD 1467,1550,
HYPER 0067,0125,0262,0322,0329,0336,0359,0415,0424,0435,0497,0513,
1435,1638,1639,0230,
HYPSON 0141,0025,0544,1434,0557,0336,0540,0513,0097,
HYUNDAI 6150,6169,6275,6276,6403,6408,6410,6450,6485,6502,6506,6540,
6846,6903,6910,6911,6923,6928,6931,
I. V. 0513
IBERIA 0428,0513,
IBERVISAO 0391
ICE 0262,0415,0057,0111,0067,0540,0513,0359,0322,
ICS 0262,0067,0322,
IEG 0067
IMC 0513
IMPER 0322,0359,0111,0262,
IMPERIAL 0057,0060,0131,0540,0227,0298,0359,0374,0435,1227,0467,0513,
0230,
INCOBE 0067,0359,0290,
INDESIT 0107
INDIANA 0513

INGELEN 0162
INGERSOLL 0359,0513,
INNO HIT 0025,0067,0075,0077,0111,0115,0540,0227,0262,0296,0322,0359,
0375,0415,0424,0513,1423,0409,1638,1639,4367
INNOVATION 0540,0513,
INTERBUY 0125,0322,0505,0359,1637,0540,0262,0415,
INTERDISCOUNT 0513,0092,0119,0242,0174,
INTEREACTIVE 1637,0540,0513,
INTERECONOMY 0133
INTERFUNK 0042,0111,0047,0062,0069,0079,0092,0096,0162,0302,0540,0374,
1617,1621,1445,0052,0513,1654,
INTERNAL 0540,0513,
INTERVISION 0067,0077,0262,0322,0351,0359,0435,0505,0540,0544,1280,0111,
0542,1657,0230,
INTRON 0322
INWAH 0540
IRRADIO 0075,0097,0111,0125,0136,0230,0262,0322,0296,0329,0359,0415,
0528,0557,0561,0495,1126,1269,1296,0547,1459,1525,0542,0513,
1638,
ISKRA 0230,0025,0067,
ISUKAI 0424,0262,0513,
ITC 0513,0067,0230,
ITL 0359
ITS 0262,0540,0359,0067,0513,0322,0415,
ITT 6138,6182,6366,6376,6380,6388,6432,6450,6485,6487,6502,6506,
6525,6548,6553,6725,6726,6730,6861,6936,6965,6005,6006,6007,
6008,
ITV 0111,0060,0354,0540,0322,
JCE 0262
JEC 0513,0197,0207,0296,0337,0557,1423,1608,0467,0351,
JET POINT 0513,0384,
JINLIPU 0359
JMB 0540,0513,
JOCEL 0513,0435,0556,
JOHNSON 0067
JPS 0505
JRC 0435
JUBILEE 0540
JVC 6168,6186,6187,6188,6189,6190,6191,6192,6193,6194,6432,6712,
6725,6726,6936,
KABEL 0300
KAIDO 0083
KAISER 0513,0424,
KAISUI 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
KAMAR 0515
KAMBROOK 0067,0230,0111,0542,0322,0119,
KAMOSONIC 0067
KAMP 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,

0359,0435,0542,0513,1637,1639,1654,
KANGSLEY 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
KAOSHO 0064,0067,0075,0082,0227,0296,0312,0322,0359,0375,0384,0422,
0453,0513,0515,0542,0544,0547,1309,0111,1382,0540,0528,1657,
1658,2066,4267,
KAPSCH 0062,0066,0083,0096,0108,0111,0136,0149,0153,0162,0252,0290,
0322,0327,0374,0390,0391,0222,0513,0539,1423,1445,0052,1654,
1713,
KARCHER 0238,0237,0359,0067,0424,0435,0516,0111,0513,0540,
KATHREIN 0513
KAWA 0262,0415,
KAWASHO 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
KAYA 0359,0322,
KB ARISTOCRAT 0162,0391,
KELCINATOR 0062
KEN 1317
KENDO 6138,6366,6403,6415,6422,6426,6432,6482,6485,6486,6487,6502,
6505,6506,6529,6861,6874,6941,6966,
KENNEDY 0222,0429,0115,0052,1149,0153,0108,
KENNEX 0097,0540,0513,4367,0550,1423,0557,
KENYA 0528
KERION 1639,0513,
KEYMAT 1491,1467,1587,0467,0578,0550,0480,0417,2008,2395,1496,4551,
0540,1386,1391,
KEYSMART 0513
KIC 0515,0067,0237,
KIMAY 0322
KINGDHOME 0513
KIOTA 0359,0322,0544,0415,1082,
KITON 0540,0513,
KITT 0067,0322,0513,
KITTEN 0513,0111,
KIYOGIN 0067,0025,0237,0230,1174,
KLARMAX 0237,0429,0073,1611,0233,0295,0540,0513,0354,
KOBALTRONIC 0067,0230,1174,
KOBIC 0359
KOLSTER 0237,1614,0513,0322,0262,1227,0077,0067,0230,1174,
KONG WAM 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
KONICHI 0359
KONKA 1302,0513,1420,1116,0540,0415,1261,0145,0262,
KONTAKT 0549
KORPEL 0540,0513,
KOSMOS 0540,0513,
KOTRON 0322,0359,0230,
KRAKING 0230
KRIESLER 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,

1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
KRONNE 0067,0230,
KTV 0513
KUBA ELECTRONIC 0133,0083,0391,0230,0067,
KUCCAI 0097
KURO 0024,0513,0067,0149,0197,0227,0290,0312,0314,0363,0375,1360,
1423,1657,1658,1661,1669,0539,
KYOTO 0230,0246,
L&S ELEKTRONIK 0557
LAVA 0513
LAVIS 1611,0162,0025,
LAZER 0513
LCE 0415
LEADER 0359
LECSON 0540,0513,
LEGENG 0490,0359,0513,0067,0322,
LENCO 6138,6139,6141,6155,6278,6432,6454,6485,6506,6711,6811,6908,
6982,
LENOIR 1399,0067,0424,0359,0354,1009,1639,0322,0097,0409,1343,0141,
1638,1401,1395,1394,1398,1396,0513,
LEVIS AUSTRIA 0540,0513,
LEXUS 0374,0322,0513,
LEYCO 0513,1453,0322,
LG 6432,6485,6502,6505,6506,6510,6529,6531,6532,6654,6694,6697,
6698,6702,6703,6704,6705,6709,6712,6713,6714,6719,6770,6895,
6959,6009,6010,6011,6012,6013,6014,6015,
LIFE 0359,1435,
LIFETEC 0354,0536,0097,0540,0513,0359,0322,0262,1638,0557,
LIGHSTAR 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
LINTON 0133
LLOYD'S 0422,0515,1082,0359,0415,0052,0136,0096,0067,0322,
LME 0025,0067,0114,0204,0237,0435,0230,
LOCATEL 0351,0619,1445,
LOEWE 6216,6409,6419,6432,6435,6442,6452,6474,6501,6513,6935,
LOGIK 0097,0384,0422,0374,0513,0146,
LOVE 0428,0295,0528,0073,0067,0429,0237,0233,0025,0230,0513,0222,
0255,1595,1594,1410,1453,0540,1450,
LS ELEKTRONIK 0557
LTV 0062,0083,0162,0178,0203,0204,0251,0252,0431,0539,0052,1654,
0222,2356,4340,4341,
LUMA 0354,0067,0359,0080,0108,0513,0540,0337,0222,0295,0052,0153,
LUMATRON 0513
LUXMAY 0540,0513,0490,
LUXOR 6138,6376,6378,6380,6382,6384,6385,6390,6403,6422,6426,6432,
6443,6471,6485,6486,6487,6520,6539,6936,
LXI 0547
LYOTRON 0075,0082,0083,0111,0067,0125,0141,0145,0153,0052,0227,0277,

0275,0329,0540,0359,0384,0557,0561,0925,0547,1459,1498,1476,
0513,1607,0542,1614,0230,3044,4206,4207,
M.D.C 1638
MACROM 0480
MADISON 0513,0540,
MAGAVOX 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
MAGNADYNE 0024,0025,0060,0077,0115,0359,1009,1639,0230,
MAGNAFON 1639,0077,0067,0025,0513,0230,1126,0131,0238,
MAGNASONIC 0111
MAGNAVOX 0540,0111,
MAGNEX 0513,0322,
MAGNUN 0141,0374,0359,1638,0255,0540,
MAKROSONIC 1324
MANDI 0540
MANDOR 0322
MANESTH 0513,0114,0052,1654,0067,0540,1608,0322,
MANHATTAN 0359,0097,0513,
MARANTZ 0513,0528,
MARECH 0513,0114,
MARK 0354,0513,0336,
MARSHALL 0359,0262,
MASCOM 0513
MASCOT 0057
MASUDA 0262,0322,0513,0300,
MATCH ITALIA 0359,0513,0322,
MATSUI 0549,0351,0397,0359,0196,0067,0065,0300,0536,1016,0415,1422,
0111,0513,0322,0060,0539,0336,
MATSUKA 0067,0322,
MATSUVIANA 0528
MAXAM 0359,0322,
MAXDORF 0322,0561,0495,
MAXELL 0329,0424,0359,0025,
MAXIMAL 0230
MAXON 0359
MAXWELL 0025,0077,0513,
MB LINE 0322
MC MICHAEL 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
MCE 0359,0322,0527,0513,
MCM 0359
MECOA 0513
MEDIASONIC 0513
MEDIATOR 0540,0513,
MEDION 6376,6377,6403,6408,6410,6422,6426,6432,6450,6454,6485,6486,
6502,6503,6505,6506,6508,6529,6543,6549,6647,6693,6757,6935,

6939,6940,
MEGATRON 0547
MEGAVISION 0359
MEGHA 0513
MELBOX 0024,0025,0096,0111,0204,0237,0490,0540,0230,1611,
MELECTRONIC 0060,0066,0133,0136,0137,0181,0282,0295,0351,0354,0359,0390,
0513,1009,1614,1638,0540,0222,4340,4341,
MELVOX 0025,0162,
MEMOREX 0322
MEMPHIS 0322,0067,0490,0359,
MERCURY 0322,0067,0384,0359,0544,0111,0513,0515,0237,
MERRIT 0162
METEOR 0238
METZ 6345,6391,6392,6393,6394,6395,6422,6426,6432,6485,6529,6619,
6620,6621,6622,6935,6939,6972,
MGA 0322,0262,0354,1637,0513,0547,
MGAON 0322
MICROMAXX 0295,0513,0540,
MICRON 0067
MICROSONIC 0572,1139,
MICROTEK 0561,1127,0242,0495,0359,0513,
MIGROS ELECTR 0295
MINATO 0540,0513,
MINERVA 0096,0103,0157,0295,0327,0335,0549,1491,1450,1649,1652,1692,
0351,1702,
MINERVA FRANCE 0549
MINOKA 0540,0513,
MISTRAL 0051,0217,0229,0237,0242,0254,0302,0378,0455,0513,1616,0322,
1700,
MITRONIC 0329
MITSUBISHI 6138,6160,6161,6162,6163,6164,6165,6422,6426,6432,6440,6455,
6889,6890,6016,6017,6018,6019,
MITSUTI GENERAL 0298,0233,
MIVAR 0025,0058,0068,0067,0075,0105,0408,
MKC 0578
MKM 0238
MOBILE TV 0513
MOTION 0153,1149,0238,0108,0114,0513,1637,0133,0077,0540,1126,0083,
MTC 0336,1296,0083,1657,1637,0296,0230,
MULTIMAT 0238
MULTISTANDARD 0077
MULTITECH 0359,0557,0141,0067,0262,0149,0025,1227,0125,0077,0178,0162,
0322,1614,0490,0336,0354,0545,0540,1613,0230,1657,0513,
MURPHY 0052,0230,0083,1445,
MUSIKLAND 0540,0513,
MUSTAG 1121
MYRYAD 0540,0513,
NAD 0547,0162,0391,

NAGOYA 0230,0441,
NAIKO 0540,0513,
NAKAMURA 0540,0513,
NAONIS 0062,0080,0108,0153,0052,0197,0242,0295,0390,0428,0429,0435,
0222,0513,1149,1181,0540,1653,
NARANYA 1531
NARITA 0547,0354,0322,0067,
NASSA NAGEL 1563,0230,1611,
NATIONAL 0518,0310,
NEC 6138,6272,6338,6680,6681,6889,6890,6891,6020,6021,6022,6023,
6024,6025,
NECKERMANN 6138,6186,6425,6432,6439,6454,6502,6506,6529,6570,6571,6582,
6584,6861,6862,6026,6027,6028,6029,6030,6031,6032,6033,6034,
6035,6036,6037,6038,
NEI 0435,0230,0490,0262,0513,
NEOVIA 0513,1459,1568,1383,1543,1382,1514,1450,1301,
NESCO 0327,0125,0375,0312,0222,
NETSAT 0540,0513,
NEUFUNK 0513
NEW GOLDVISION 0322,0359,0067,0513,0505,0424,0111,0557,
NEWMAR 0067,0230,1174,
NEWORLD 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
NEWTECH 0067,0242,0513,
NEXIUS 0556,1422,0513,1393,0540,
NFREN 1555
NICAMAGIC 0025,0067,0083,0111,0114,0115,0136,0540,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
NIKKAI 0513,0322,0067,0329,0082,0141,
NIKKEI 1467,1550,1399,0540,0556,1537,0513,0322,0097,
NIKKO 0547,0513,0111,
NISSAN 0384
NOBLEX 0149,0354,0422,0197,1661,0415,0359,1283,0528,
NOBLIKO 0067,1126,0136,0131,1227,
NOGAMATIC 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
NOKIA 0066,0162,0513,0252,0322,0390,0431,0539,0556,0558,0591,1423,
0222,
NORDING 0077,0131,
NORLAND 0230
NORDMENDE 6182,6335,6366,6408,6410,6440,6450,6453,6502,6506,6686,6691,
6768,6898,6965,6969,6970,6971,6973,6974,6976,6039,
NORDTON 0062,0080,0108,0153,0052,0197,0242,0295,0390,0428,0429,0435,
0222,0513,1149,1181,0540,1653,
NORDWAY 0298,1657,
NORFOLK 0441
NORM N 0513
NORMEREL 1630,0540,
NORTEK 0513,0097,0141,

NORTON 0359,0424,
NORWAY 0298,1657,
NOVA 0329
NOVAK 0540,0513,
NOVATRONIC 0359,0111,0322,0513,0354,0540,0329,
NUCLEAR 1227,0080,0115,0540,0097,0302,0513,1126,0025,0077,0083,
NU-TEC 0539,0561,
O GENERAL 0359,0149,
OCEANIC 0062,0083,0162,0178,0203,0204,0251,0252,0431,0539,0052,1654,
0222,2356,4340,4341,
OCTAL 0067
OCTAN 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
ODEON 0359,0322,0111,0513,
OEC ELECTRONIC 0329,1494,
OKANO 0359,0227,0302,0513,
OLIDATA 1378
OLIVETTI 0527
OLMAL 0025,0237,0513,0262,0322,0125,0230,1174,1639,
OLYMPIA 1423
OLYMPIC 0359,0424,
OMEGA 0415,0322,0262,
ONCEAS 0359,0067,0060,
ONDIOLA 0513
ONIDA 0302
ONIEL 0359
ONWA 0415,0556,0262,0361,0077,0322,
OPERA 0540,0513,
OR - ON 0424
ORAVA 0230,0024,0513,
ORBISAT 0067
ORBIT 0513
ORIENT 0359
ORION 6138,6158,6166,6169,6278,6283,6297,6328,6329,6330,6332,6333,
6334,6335,6346,6408,6410,6422,6425,6426,6432,6439,6443,6444,
6454,6485,6486,6502,6503,6506,6508,6582,6656,6693,6861,6862,
6867,6909,6939,6964,
ORION 0111,0119,0230,1422,0415,0441,0513,1059,
ORLINE 0540,0513,
ORMOND 0097,0513,
ORSOWE 0025
OSAKA 0195
OSAKI 0111,0195,0513,0067,0262,
OSIO 0075,0513,0262,
OSO 0262
OSUME 0540
OTAKE 0300,0195,

OTF 0230,0111,
OTHER 5013,5023,
OTHER LINE 0067,0025,0435,0513,
OTTO VERSAND 0047,0067,0083,0111,0114,0125,0127,0133,0157,0162,1637,0178,
0189,0195,0197,0230,0233,0242,0296,0300,0310,0311,0321,0326,
0337,0359,0391,0409,0415,0418,0427,0434,0435,0174,0351,0540,
0513,1652,0495,0445,
OVP 0513
PACIFIC 0513
PAEL 0067,1126,0096,
PALLADIUM 6410,6415,6422,6426,6432,6442,6450,6506,6529,6040,6041,6042,
6043,6044,6045,6046,
PALSONIK 0322,0067,0329,0302,0262,0359,
PANAMA 0067,0322,0057,0540,0513,
PANASHIBA 0359
PANASONIC 6.20962E+79
PANAVISION 0513,0295,0322,0536,0505,1639,
PANAVOX 0067,0359,0424,1121,0572,1325,1139,0545,1447,0513,
PANDA 0310
PANORAMA 0505,0067,0536,0262,0359,
PANORAMIC 0092
PATH CINEMA 0025,0067,0114,0204,0237,0435,0230,
PATH MARCONI 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
PAUSA 0359
PCM 0513,1639,0114,
PEACOCK 0067,0111,
PEONY 0527
PERDIO 0513
PERFEKT 0513
PERSHIN 0204,0096,
PHILARMONIC 0060,0067,
PHILBIX 0246,0114,0025,0230,0359,0513,
PHILCO 0024,0057,0060,0115,0131,0149,0227,0298,0359,0374,0435,0572,
1139,1611,0513,0230,
PHILIPS 6151,6182,6402,6404,6406,6407,6411,6412,6413,6414,6421,6423,
6424,6425,6428,6429,6430,6431,6432,6433,6439,6440,6446,6449,
6455,6461,6472,6474,6476,6484,6485,6527,6529,6541,6561,6562,
6563,6564,6565,6566,
PHOENIX 0238,0114,0111,0115,0513,
PHONOLA 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
PIONEER 6216,6341,6342,6343,6344,6345,6347,6348,6425,6432,6439,6600,
6601,6602,6603,6604,6605,6606,6607,6608,6609,6610,6746,6976,
PLANTRON 0359,0513,0322,
PLASMATECH 1383,1436,
PLATINIUM 0528

PLAYDOR 0322
PLAYSONIC 0067,0237,0024,0513,
POLYTRON 0513
POP 0322,0095,
POPPY 0359
PORTLAND 0540,1638,0513,0354,
POWERJPOINT 0540,0513,
PRANDONI 1227,0080,0115,0540,0097,0302,0513,1126,0025,0077,0083,
PRECISION 0067,0329,
PREMIER 1116,0322,
PRIMA 0505,0067,0329,0322,
PRINCE 1227,0080,0115,0540,0097,0302,0513,1126,0025,0077,0083,
PRINCESS 0329,0540,0359,
PRINSTON 0141
PROCYON 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
PROFESSOR 0111
PROFEX 0359,0435,0131,0298,0162,0230,
PROFILINE 0513
PROFILO 0111,0513,0025,
PROFITRONIC 0077,0540,0513,
PROLINE 0295,0554,0375,0230,0418,0540,0513,
PROSONIC 0513,1638,0415,
PROTECH 0067,0091,0097,0111,0230,0322,0336,0359,0374,1357,0540,0513,
1638,1639,
PROTON 0547
PROVISION 0359,0513,0409,0540,0354,1641,0390,0743,0322,
PVISION 1489
PYE 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
PYGMY 0024,1621,
QUADRAL 0374
QUADRIGA 0540
QUADRO 0579,1410,1112,0374,0513,1423,
QUALCRAFT 0329,0262,
QUASAR 0077,0196,0329,0136,0025,1383,0237,1126,0238,0131,
QUEENFIDELITY 0060,0067,0111,0354,0359,0361,0375,0502,0513,0545,0554,0557,
1390,1412,1450,1453,1574,1601,1613,0540,
QUELLE 6138,6186,6216,6371,6380,6382,6384,6388,6390,6415,6422,6425,
6426,6431,6432,6435,6439,6442,6452,6461,6529,6570,6571,6582,
6584,6656,6730,6746,6861,6862,6935,6945,6946,6974,6979,6047,
6048,6049,6050,6051,
QUESTAR 0197,0149,
R. LINE 0540,0513,
RADIALVA 0513,0354,0540,
RADIOLA 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,

1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
RADIOMARELLI 0060,0024,0359,0077,0025,0115,0230,0111,0374,0513,1009,1639,
RADIONETTE 0066,0282,0052,1654,
RADIOSHACK 0547,0540,0513,
RADIOTONE 0107,0359,0111,0536,0322,0336,0513,1638,0255,0540,0227,
RANK / RBM 0052,0435,0295,0230,
REALISTIC 0547
RECOR 0374,0513,1637,0540,
RED STAR 0513
REDDER 0233,0237,0197,
REDIFFUSION 0162,0052,
REDO 0359,0354,
REDPOINT 0549
REFLEX 0513,1639,0097,0540,
REGENTE 0359
RELISYS 1383
RENDER 0550,1511,1412,0417,1469,0513,
REVOX 1637,0540,0513,
REX 0062,0080,0108,0153,0052,0197,0242,0295,0390,0428,0429,0435,
0222,0513,1149,1181,0540,1653,
RFT 0262,0540,0242,0359,0336,1611,0024,0363,0077,0311,
RHINEX 0561
RICONH 0540,0513,
RITZ 0230
RM 2000 1639,0513,0097,
ROADSTAR 0076,1453,0359,0141,0097,0540,0528,0557,1423,1469,0262,0513,
1343,1525,1435,0556,
ROBERTS 0327
ROBOTRON ELECTR 0024,0363,
RODEX 0540,0513,
ROSE&HOLIET 0539
ROSITA 0359
ROSNER 0067
ROWA 0359,0513,0528,0067,0322,
ROWSONIC 0067
ROYAL 0359,0322,0262,0374,0513,0067,0556,0424,0543,0141,1420,
ROYAL LUX 0556
RUEFACH 0391,0111,0359,0077,0435,0354,0322,0329,0162,0513,
RUKOPIR 0540,0513,
RUNCO 1360
SABA 0025,0051,0055,0090,0092,0094,0095,0111,0119,0164,0181,0229,
0242,0513,0557,0052,
SAGEM 0073
SAINEL 0230
SAISHO 0083,0196,0067,0065,0300,0354,0418,0237,0111,0322,0262,
SAITO 0062,0083,0162,0178,0203,0204,0251,0252,0431,0539,0052,1654,
0222,2356,4340,4341,

SAIVOD 0540,0513,
SAKAI 0067
SAKIO 0359,0354,0322,
SAKURA 0359
SALORA 0052,0075,0080,0082,0083,0137,0540,0178,0162,0513,0252,0390,
0431,0539,0556,1016,0230,1702,0222,
SAMBERS 0329,1126,0077,0025,1124,0237,0238,0131,
SAMPO 0111
SAMSUNG 6138,6139,6144,6145,6272,6278,6281,6299,6300,6301,6302,6304,
6305,6306,6307,6308,6309,6310,6311,6312,6313,6317,6318,6319,
6320,6321,6323,6324,6420,6432,6455,6483,6511,6529,6536,6541,
6548,6557,6558,6559,
SAND 0540
SANDOR 0062,0083,0162,0178,0203,0204,0251,0252,0431,0539,0052,1654,
0222,2356,4340,4341,
SANDRA COLOR 0025,0067,
SANSUI 1423,0359,0415,0424,1469,0544,0539,1340,0540,1237,0322,0557,
0149,0513,
SANWA 0024,0513,0067,0149,0197,0227,0290,0312,0314,0363,0375,1360,
1423,1657,1658,1661,1669,0539,
SANYO 0024,0513,0067,0149,0197,0227,0290,0312,0314,0363,0375,1360,
1423,1657,1658,1661,1669,0539,
SAR 0083,0513,0067,
SATRONIC 0057
SATUM 0354,0359,0114,0513,0227,0136,0025,
SAVE 0540,0513,
SAVVILLE 0065,0127,0195,0196,0262,0300,0322,0329,0359,0407,0409,0415,
0418,0447,0472,0544,0556,0557,0513,1009,0141,1368,1422,0540,
SBR 0024,0042,0067,0111,0119,0133,0153,0157,0302,0391,0536,0586,
1317,1364,1380,1383,1557,1607,1617,1618,1630,0540,0513,0409,
1672,1705,
SCHAUB LORENZ 6408,6410,6422,6426,6450,6485,6486,6487,6502,6505,6506,6522,
6523,6537,6543,6651,6678,6740,6747,6766,6.77968406845684E+27
SCHNEIDER 6138,6268,6278,6371,6399,6402,6403,6404,6422,6425,6426,6429,
6432,6433,6434,6438,6439,6442,6448,6450,6451,6453,6454,6455,
6460,6461,6486,6497,6502,6503,6505,6506,6508,6515,6526,6529,
6533,6534,6536,6550,
SCOTLAND 0025,0067,0083,0111,0114,0136,0540,0196,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
SCOTT 0114,1639,1638,0547,0327,1317,
SEARS 0024,0513,0067,0149,0197,0227,0290,0312,0314,0363,0375,1360,
1423,1657,1658,1661,1669,0539,
SEAWAY 0513
SEDIP 0025,0067,0114,0204,0237,0435,0230,
SEELVER 0540,0513,
SEG 6138,6278,6403,6415,6422,6426,6427,6439,6443,6465,6485,6486,
6496,6506,6523,6582,6764,6849,6935,6944,
SEI 0024,0077,0115,0127,0169,0162,0195,0196,0222,0262,0295,0300,

0359,0391,0409,0528,0556,0581,1009,1022,1422,0513,1433,1434,
1565,1622,0540,0445,1639,
SEIGA 0024,0513,0047,0065,0103,0149,0197,0230,0353,0354,0359,0547,
0527,1637,0540,1661,1691,1692,
SEIKO 0354
SEITECH 0556
SELECO 0062,0080,0108,0153,0052,0197,0242,0295,0390,0428,0429,0435,
0222,0513,1149,1181,0540,1653,
SELECT 0513
SELTEN 1432
SEMP 0337
SENCORA 0359
SENDAY 0513
SENTRA 1608,0262,0207,
SERINO 0073
SET 0435,0513,
SETRON 0359
SHARP 6171,6172,6173,6174,6175,6176,6177,6178,6179,6180,6181,6182,
6183,6184,6185,6425,6432,6485,6608,6733,6.74667976806683E+27
SHINTOSHI 0513,0540,
SHIVAKI 0311,0540,0513,0230,0111,
SHIWAN 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
SHNIED 0322
SHORAI 0195
SHOV 0415,0359,0322,0513,0067,
SIAREM 0025,0115,0077,0024,
SICANTIC 0052,0075,0082,0083,0067,0137,0540,0178,0162,0252,0390,0431,
0539,0556,1016,0222,1713,
SICE 1652
SIDEC 0230
SIEL 0230
SIEMENS 0039,0069,0103,0148,0157,0513,0329,0335,0351,1651,1652,
SIERA 0540,0513,
SIESTA 1657,0336,0111,
SILVA 0149,0359,0067,0302,0322,0298,0513,0329,
SILVER 0149,0262,0513,0540,0322,
SILVERCREST 6403,6422,6443,6485,6682,
SIMATEC 0065,0127,0195,0196,0262,0300,0322,0329,0359,0407,0409,0415,
0418,0447,0472,0544,0556,0557,0513,1009,0141,1368,1422,0540,
SIMTEL 0111,0262,0322,0424,0133,
SINGER 0359,0077,0060,0115,1227,0025,0024,0513,0067,0429,0111,0415,
0540,1311,1638,
SINOTECH 0322,0495,0561,0374,0141,
SINUDYNE 0024,0077,0115,0127,0169,0162,0195,0196,0222,0262,0295,0300,
0359,0391,0409,0528,0556,0581,1009,1022,1422,0513,1433,1434,
1565,1622,0540,0445,1639,
SIREL 0025
SKANTIC 0052,0075,0082,0083,0067,0137,0540,0178,0162,0252,0390,0431,

0539,0556,1016,0222,1713,
SKAY 0540,0513,0424,
SKY LINE 0141,0067,
SLAVA 0067
SLIDING 1549,0513,1555,0556,1383,1543,1453,2008,2395,1496,4551,0540,
1569,1564,1412,
SMARAGD 0549
SMR 0025,0077,0513,
SOLAVOX 1654,1713,0162,0082,0230,
SOMBER 0024,0025,0096,0111,0204,0237,0490,0540,0230,1611,
SONICX 0513
SONIKO 0540,0513,
SONITRON 0067,0290,0539,0024,
SONNECLAIR 0540,0513,
SONOKO 0322,0359,0067,0513,0505,0424,0111,0557,
SONOLOR 0162,0431,
SONORO 0359,0322,0111,0513,
SONTEC 0359,1657,1639,0513,0125,
SONY 6158,6159,6182,6216,6341,6425,6432,6486,6568,6569,6570,6571,
6572,6574,6575,6576,6577,6578,6579,6580,6581,6582,6584,6585,
6586,6976,
SOUND COLOR 1638,0540,0322,0513,0557,0141,0415,0143,
SOUND DESIGN 0547
SOUNDMASTER 0359
SOUNDVISION 0077,0513,0262,
SOUNDWAVE 0374,0322,0513,
SOUTHERN CROSS 1614
SOWTECH 1657
SPARKLE 0513
SPECTRA 0322,0513,0354,
SPECTRUM 0547
SPORT GENEXXA 0025,0067,0083,0111,0114,0136,0540,0196,0227,0230,0322,0354,
0359,0435,0542,0513,1637,1639,1654,
SSANGYONG 0064,0067,0075,0082,0227,0296,0312,0322,0359,0375,0384,0422,
0453,0513,0515,0542,0544,0547,1309,0111,1382,0540,0528,1657,
1658,2066,4267,
SSS 0359,0557,1558,0513,0149,1664,0322,0230,
STAG 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
STANDARD 0359,0060,0067,0262,0513,0111,0114,
STAR 0513
STARLINE 0513
STARLITE 0322,0359,1638,0111,
STARLUX 0359,0513,0067,
START 0513
STASSFURT 0262,0540,0242,0359,0336,0363,1611,0024,0077,0311,
STENWAY 0424
STERLING 0540,0513,
STERN 0062,0080,0108,0153,0052,0197,0242,0295,0390,0428,0429,0435,

0222,0513,1149,1181,0540,1653,
STRATO 0540,0513,0322,
STRONG 1432,1586,
STT SONIG 0111
STV 0162
STVI 0230,0067,
SUNIC LINE 0513
SUNKAI 0447,0073,0513,0549,0300,0195,
SUNNY 0415
SUNSTAR 0536,1639,0322,0359,0513,
SUNWATT 0111
SUNWOOD 0513,0359,
SUPERLA 0230,0025,
SUPERSONIC 0539,0544,1637,0415,0513,0359,1094,0322,
SUPERTECH 0359,0513,0415,0474,0262,1638,1453,0298,
SUPERTONE 0025,0067,0114,0204,0237,0435,0230,
SUPRA 0359,0354,0322,0329,0547,0067,0422,
SUPREME 0136,0060,
SUTRON 0359
SVA 0561
SYC LINE 0067,0359,
SYDNEY 0067
SYSLINE 0540,0513,
SYTEL 0246,0114,0025,0230,0359,0513,
TADISTAR 0374,0262,
TAISHO 0230
TAKARA 0513
TALENT 1085
TALITA 0024,0025,0096,0111,0204,0237,0490,0540,0230,1611,
TAMASHI 1323
TANDBERG 0024,0050,0092,0094,0195,0246,0295,0349,0222,1628,
TANDY 0083,0080,0067,0262,
TASHIKO 0080
TASTER 0111,0322,0262,
TATUNG 0246,0067,0111,0375,1637,0254,0065,0242,0513,
TAUTO 0513
TCL 6367,6485,6597,6846,
TCM 0540
TD DESIGN 1637
TDA 0557
TEAC/TEAK 1637,1607,0391,0544,0561,0222,0359,1592,0111,0047,1269,0513,
TEAM 0424
TEC 0047,0057,0097,0111,0067,0125,0133,0141,0153,0052,0162,0196,
0540,0222,0298,0312,0329,0354,0359,0391,0409,0434,0513,0230,
2315,
TECCO 0092,0067,0359,
TECHLINE 0077,0097,0513,0540,
TECHNEMA 0025,0067,0083,0111,0114,0136,0540,0196,0227,0230,0322,0354,

0359,0435,0542,0513,1637,1639,1654,
TECHNICAL 0513
TECHNICS 0359,0427,0310,
TECHNIKA 0262,0359,
TECHNILAND 0302
TECHNISAT 6404,6405,6417,6425,6432,6440,6446,6931,6958,
TECHNISSON 0557
TECHNOL 0359,0354,0067,0513,1637,1094,0544,0322,
TECHWOOD 0513,1423,
TECNIMAGEN 0540
TECNISON 0111,0067,0359,
TECO 0143,0196,0222,0262,0322,0359,0415,0513,1343,1410,1423,0540,
1440,1469,1559,1578,1587,1588,1638,1639,1666,1711,
TECSONIC 0572
TEDELEX 0230,0359,0111,0302,0067,0490,0561,0513,1094,1243,0528,
TEINEL,SA 0230,1639,
TEK 1127
TEKA 1127
TEKNANT 0424,0513,0359,
TEKNIKA 1614
TEKON 0384,0359,
TELEAVIA 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
TELECHROM 0424,0513,
TELECOR 0540,0513,
TELEFAX 0359
TELEFUNKEN 6366,6388,6397,6398,6403,6418,6422,6428,6432,6485,6486,6487,
6494,6495,6502,6506,6543,6835,6939,6965,6.96769686969697E+35
TELEFUSION 0540,0513,
TELEGAZI 0391,0162,0540,0513,
TELEKTRON 0359,0077,
TELEMASTER 0513
TELEMEISTER 0540
TELEOPTA 0359
TELEPAC 0359
TELEPOINT 0513
TELERENT 1637
TELESONIC 0513,1338,
TELESTAR 6138,6446,6515,6529,6555,6969,
TELESYSTEM 1548,1475,0513,2008,2395,1496,4551,0540,
TELETECH 0097,0513,0057,0359,0540,
TELETON 0067,0108,0153,0052,0083,0149,
TELEVIEW 0540,0513,
TELEXA 0077
TELRA 0111,0513,
TEMCO 0195
TEMPEST 0540,0513,0067,0359,0262,
TENNESSEE 0540,0513,

TENSAI 0060,0066,0067,0077,0097,0111,0114,0195,0238,0262,0282,0302,
0354,0359,0415,0540,0542,0513,1639,0230,
TENSON 0359
TESLA 0024,0230,0111,0513,0415,0262,0237,0528,0540,
TESLA SLOW 0024,0230,0111,0513,0415,0262,0237,0528,0540,
TETTRAN 0230,0114,
TEVION 6403,6410,6422,6426,6450,6454,6502,6505,6506,6507,6529,6549,
6555,6685,6757,6811,6846,6888,6891,6935,
TEXET 0067
THES 1440
THOMAS 0544
THOMSON 6151,6152,6153,6154,6182,6365,6366,6367,6368,6369,6370,6398,
6434,6448,6506,6533,6543,6597,6686,6691,6768,6811,6835,6953,
6965,6968,6969,6970,6972,6973,6974,6976,6979,
THORN 0051,0217,0229,0237,0242,0254,0302,0378,0455,0513,1616,0322,
1700,
TIME 1537,1489,0513,
TMK 0196,0547,
TOBISHI 0262,0359,0384,0195,0067,0322,
TOBO 0322,0359,
TOKAI 0359,0322,0435,0540,0513,
TOKIWA 0359,0322,0435,0540,0513,
TOKO 0513
TOKYO 1608,0424,0384,
TOMASHI 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
TOMITA 0067
TOP VISION 0230,0513,0435,0238,
TOPSHOW 0561,0322,
TORRE 0051,0055,0052,0090,0092,0094,0095,0096,0119,0136,0164,0181,
0229,0230,0242,0455,0549,1045,1435,1478,1445,2026,
TOSHIBA 6138,6152,6216,6230,6272,6300,6326,6327,6329,6410,6422,6425,
6426,6432,6485,6502,6505,6506,6726,6730,6731,6733,6734,6737,
6741,6745,6746,6748,6749,6751,6752,6755,6784,6901,
TOWADA 0230,0077,
TRANS CONT. 1437,1434,1453,1569,0097,0540,1383,1564,0513,
TRANSONIC 1607,0322,0536,0513,0528,
TREVI 0424,1549,0149,0359,0230,1525,1343,
TRIAD 0540,0237,0513,0111,
TRIDENT 0067
TRILUX 0540
TRISTAR 0374,0111,0262,
TRIUMPH 0196,0540,0513,
TRIVISION 0359
TSOSHI 0556,0544,0424,0262,0067,0513,0359,0415,0073,1420,
TTR 0513
TV STAR 0230
TVD 0513
UHER 0153,1149,0238,0108,0114,0513,1637,0133,0077,0540,1126,0083,

ULTRAVISION 0237,0290,
ULTRAVOX 1639,0077,0354,0067,0513,0409,0125,0115,0189,0050,0111,0024,
UNDERWOOD 1391
UNIC RADIO 0025,0067,0230,0435,1657,
UNIMOR 1657,0513,0336,0153,
UNITED 1423,0557,1657,0145,0141,0513,
UNITRON 1338
UNITRONIC 0359
UNIVERSUM 6138,6278,6376,6377,6388,6415,6422,6425,6426,6427,6432,6439,
6453,6461,6485,6529,6582,6584,6935,6947,6969,6061,6062,6063,
6064,6065,6066,6067,6068,6069,
UNIVOX 0024,0237,0230,0162,0540,
UNK 0025,0557,0375,0230,0513,
URANIA 0329,1126,0077,0025,1124,0237,0238,0131,
URANYA 0354,0359,0114,0513,0227,0136,0025,
UTAX 0067,0359,
VANGUARD 0067,0083,0359,
VASILINEC 0359
VECO 0359,0111,
VENTANA 0513
VESTEL 0042,0057,0083,0097,0230,0298,1423,0540,0513,1639,
VEXA 0424,0359,0067,0513,
VICEROY 0329,1082,0067,0322,
VIDECON 0111
VIDEOLOGIC 0262,0067,0322,
VIDEOMAC 0067,0322,
VIDEON 0513
VIDEOSAT 0057,0125,
VIDEOSYSTEM 0513,0540,
VIDEOTON 0513,0060,0067,0097,0111,0119,0178,0290,0302,0374,0391,0435,
0441,1423,0540,0230,
VIDESON 0230
VIDIKRON 0359,1661,0114,0077,
VIDION 0359
VIDITAL 0322
VISIOLA 0025,0067,0114,0204,0237,0435,0230,
VISION 2000 0513,0359,0540,0322,
VISION MAGIC 1412
VISIONREX 0025
VISTA 0051,0217,0229,0237,0242,0254,0302,0378,0455,0513,1616,0322,
1700,
VISTAR 0203,0431,
VORTEC 0145,0540,0513,
VOXSON 0024,0080,0136,0322,1227,0556,
VSM 0181
WAGNER 1654
WALKIE 0295,0153,
WALKVISION 0513

WALTHAM 0513,0060,0067,0097,0111,0119,0178,0290,0302,0374,0391,0435,
0441,1423,0540,0230,
WATSON 0111,0080,0097,0105,0114,0115,0196,0540,0262,0322,0359,0536,
0513,1639,1651,
WATT RADIO 0227,0077,0115,0060,0298,0067,0513,0359,1657,0238,
WEBER 0359,0125,0262,0322,0047,
WEGA VISION 0149,0024,
WEGAVOX 0374,0359,0556,0302,0322,0528,0540,0141,0097,0057,0513,
WELLFUND 0424
WELLINGTON 0513
WELLTECH 0557
WELTBlich 1639,0540,0114,0513,1638,1453,
WESTON 0435,0540,0424,
WESTWOOD 0513,0540,1338,
WHARFEDALE 0540,1338,
WHITE WESTHINGHOUSE
0067,0077,0083,0108,0114,0115,0131,0136,0153,0227,0295,0322,
0359,0374,0424,0435,1149,0540,0513,1639,1658,0230,
WILSON 0513
WINDSOR 0513,0097,
WINDSTAR 0051,0217,0229,0237,0242,0254,0302,0378,0455,0513,1616,0322,
1700,
WINDY SAM 0540
WINNER 1531,1346,0359,
WINSTON 0424,0513,
WINTERNITZ 0359,0097,0497,0354,
WORLD TECH 0513
WORLDVIEW 0513,0359,0544,0111,0415,
WOV 1450
WREMEN 0238
XCELLENT 1338,1638,0513,
XENA 0204
XONYCS 0513
XRIPTON 0513,1638,0374,0540,
YAMISHI 0424,0359,0540,0544,
YAMO 0262
YOCAN 0540
YOKO 0359,0207,0322,0067,0092,0540,0354,0125,0329,0435,0262,0290,
0513,0230,0516,
YORK 0262
YOSHITA 0513
YOTAKA 0513
YUMATU 0322,0359,0111,0374,0415,
ZAMPA 0052
ZANELA 0311,0445,0321,
ZANUSSI 0062,0080,0108,0153,0052,0197,0242,0295,0390,0428,0429,0435,
0222,0513,1149,1181,0540,1653
ZENOR 0539

ZIRWATEL 0495
ZOPPAS 0062,0080,0108,0153,0052,0197,0242,0295,0390,0428,0429,0435,
0222,0513,1149,1181,0540,1653,
ACCOUSTIC SOLUTIONS 0383,0350
AEG 0894,0333
AFREEY 0386
AIRIS 0357
AIWA 0383,0377
AKAI 0369,0333,0382,0350,0894,1082
ALBA 0384,0350,0381,0357,0370,0351
ALL-TEL 0333
AMES 0383
AMSTRAD 0350
AMW 1053,1054
ANABA 0961
ANSONIC 0356
APEX 0921,0384,0357,0911,0390,0913,1083,0949
ARENA 0923
ASPIRE 0952
A-TREND 0347
AUDIOSONIC 0382,1062
AUDIOVOX 0942
AXION 0942
B & K 0978
BAIER 0349
BAZE 0357
BEKO 1064
BLACK DIAMOND 0350
BLAUPUNKT 0384
BLU-RAY 1796,1109,1108,1107,1113,1081,0375
BLUE NOVA INTERNATIONAL1A0L51
BLUE SKY 0375,0373,0357,0350
BOMAN 0894,0351
BRANDT 0373,0360,0362
BRITANIA 1795
BROKSONIC 0920,0967
BUSH 0384,0382,0350,0381,0356
CAMBRIDGE 0376
CELESTIAL 0357
CENTREX 0357
CENTRIOS 0932,0951,0954,0955
CENTRON 0932
CENTRUM 0926,0928,0350,0927
CINETEC 0350
CINEVISION 0375
CLASSIC 0383
CLATRONIC 0357,0894
CMI 0923

COBY 0332,0916,0946,0947,0357,1051,0948

CONTEL 1772,0894

CRITERION 0344

CROWN 0373,0382

C-TECH 0341

CURTIS 0950,0948

CYBERCOM 0356,0930,0932,0330,0335,0339,0340,0341,0342,0345,0352,0358,
0371,0923,0375,0343,0924,0933,0338,0334,0344,0664,0372,0373

CYBERHOME 0347,0912,0985,1075

DVD

CYBERLINK 1101

CYBERMAXX 0356,0930,0373,0932,0330,0335,0339,0340,0341,0342,0345,0352,
0358,0371,0895,0896,0897,0898,0899,0900,0901,0902,0903,0904,
0923,0893,0959,1069,1070,1071,1067,1066,1068,1117,1118,0905,
0343,0924,0933,0375,0906,0338,0372,0334,0344,0664,0894

CYTRON 0356,0930,0373,0932,0330,0335,0339,0340,0341,0342,0345,0352,
0358,0371,0380,0895,0896,0897,0898,0899,0900,0901,0902,0903,
0904,0923,0893,0959,1069,1070,1071,1067,1066,1068,1117,1118,
0905,0343,0924,0933,0375,0906,0338,0372,0334,0344,0664,0894

CYBERVISION 1791

DAEWOO 0353,0354,0965,0355,0347,0380,0925,0971

DANSAI 0351

DAYTRON 0925

DCE 0356

DENON 0364,0389

DENVER 0381,1051,0894

DENZEL 0392

DESAY 0958

DIAMOND 0373,0341

DIGIFRAME 0930

DIGIHOME 0350

DIGITOR 0382

DIGITREX 0357

DIGITRON 0386

DIGIX 0962

DIK 0356

DISNEY 0339,0902

DIVIDO 0380

DIVX 0375,0932

DK DIGITAL 0356

DMTECH 0351,0333

DRAGON SYSTEMS 0356

DUAL 0350,0356,0984,0383,0956,0373,0330,0335,0337,0340,0392,0341,
0342,0345,0352,0358,0371,0923,0351,0333,0343,0338,0372,0334,
0344,0664,0375,0924,0933

DURABRAND 0333,0375,0356,0933,1085,1086,1087,1088

DVD 1024,0929

E-BENCH 0341
ELTA 0365,0382,0894,0333
ELTAX 1051
EMERSON 0380,1057,0339,0375
ENCORE 0386
ENZER 0392
ESA 0956
EUROLINE 0894
FARENHEIT 0960
FERGUSON 0373
FINLUX 0375,0357,0351
FINTEC 0350
FIRSTLINE 0373
FISHER 0378
FUNAI 0339
GE 0384
GERICOM 1064
GOLDEN SPHERE 0341
GOLDSTAR 0375,0907,0972
GOODMANS 0373,0382,0350,0333,0351
GO-VIDEO 0383,1059,1061,0338,0367,0971,0351
GPX 0910
GRADIENTE 1794,1793,0373
GRAETZ 0392
GRAN PRIX 0356
GRANDIN 0357
GRUNDIG 0385,0370,0380,0373,0378,0376,0350,0333
H & B 0350,0343
HB 1095,1089
HAAZ 0341,0342
HANSEATIC 0375,0351,0333
HARMON/KARDON 0395
HCM 0894
HD-DVD 1796,1110,1109,1108,1107,1081,0375
HE 0383
HITACHI 0367,0368,0392,0387,0350
HITEKER 0357
HOHER 0356
HOME ELECTRONICS 0383
HOMITA 0934,0935,0936,0937,0938
HOYO 0392
HYUNDAI 0351
ILO 0959
INITIAL 0384
INTEGRA 0374
INTERTRONIC 0893,0933,0894
JATON 0392
JBL 0395

JDB 0383
JVC 0361,1058,0362,0400,0964,0662,1072
JWIN 1076,1083
KARCHER 0351
KAWASHI 0333
KENDO 0356,0923,0350
KENNEX 0350
KENWOOD 0393,0364
KISS 0392
KLH 0384
KONKA 0908,0909
KOSS 0358,0373
LASONIC 0341
LAWSON 0341,0380
LECSON 0376
LENCO 1774,0373,0350,0356
LENOXX 0931,0382
LG 1800,1798,1797,1117,0375,0907,0972
LIFE 0900,0373,1117,1118,0372
LIFETEC 0356,0930,0373,0932,0330,0335,0339,0340,0341,0342,0345,0352,
0358,0371,0895,0896,0897,0898,0899,0900,0901,0902,0903,0904,
0923,0893,0959,1069,1070,1071,1067,1066,1068,1117,1118,0905,
0343,0924,0933,0375,0906,0338,0372,0334,0344,0664,0894
LIMIT 0341
LINN 0336
LITEON 0982,1056,1059,0959
LODOS 0350
LOEWE 0370,0375
LOGIX 0351,0380
LUMATRON 0332,0342,1051,0350,0383,0380
LUXMAN 0367
LUXOR 0350,0383
MAGNAVOX 0362,0379,0979,0980,0981,0370,0350,0914
MANHATTAN 0350,0380
MARANTZ 1079,0370,0379,0981,0375,0362
MARK 0350
MASTEC 0335
MATSUI 0373,0357,0350
MAXDORF 0894
MAXIM 0331,0350
MBO 0396,0383,0382
MEDIENCOM 0342
MEDION 1800,1798,1001,0356,0930,0373,0932,0330,0335,0339,0340,0341,
0342,0345,0352,0358,0371,0351,0895,0896,0897,0898,0899,0900,
0901,0902,0903,0904,0923,0893,0959,1069,1070,1071,1067,1066,
1068,1115,1116,1117,1118,0905,0343,0924,0933,0375,0906,0338,
0372,0334,0344,0664,0894
MEMOREX 0356,0339,0920

MERIDIAN 0362
METZ 0368,0350,0922
MICROMAXX 0356,0893,0930,0373,0932,0330,0335,0339,0340,0341,0342,0345,
0352,0358,0371,0895,0896,0897,0898,0899,0900,0901,0902,0903,
0904,0923,0959,1069,1070,1071,1067,1066,1068,1117,1118,0905,
0343,0924,0933,0375,0906,0338,0372,0334,0344,0664,0894
MICROMEGA 0370
MICROSOFT 0399,1100
MICROSTAR 0356,0930,0373,0932,0330,0335,0339,0340,0341,0342,0345,0352,
0358,0371,0895,0896,0897,0898,0899,0900,0901,0902,0903,0904,
0923,0893,0959,1069,1070,1071,1067,1066,1068,1117,1118,0905,
0343,0924,0933,0375,0906,0338,0372,0334,0344,0664,0894
MINATO 0349
MINERVA 0380
MINTEK 0384
MIRROR 0349
MITSUBISHI 0350,0366
MONYKA 0392
MT LOGIC 1062
MUSTEK 0383
MXONDA 0373
MYSTRAL 0356
NAD 0375,0394
NAKAMICHI 0398
NEC 0375
NEOTEK 0386
NEUFUNK 0392
NEVIR 0356
NEXXTECH 1772,0932,0954,0955,0956
NORCENT 0332,0982,0944,0945,0948
NORDMENDE 0356
NORIKO 0349
OCEANIC 1089
OKANO 0349,0362
OMNI 0382
ONKYO 0374,0975
OPTIMUS 0368,0922
ORION 0920,0335
ORITRON 0373
PACIFIC 0356,0350,0333
PACKARD BELL 0939,0940,1101,1052
PALSONIC 0357
PANASONIC 1107,0401,0364,0403,0970,0974
PANDA 0351
PHILCO 1792
PHILIPS 1775,0370,0379,0979,0980,0981,0362,1080,1123,1128,0969,0339
PHOCUS 1063,1064
PHONOTREND 0916

PIONEER 1109,1108,0368,0977,0922,0968,0976,1084
POLAROID 0957,0949
PORTLAND 0382
PRINZ 0356
PRISM 0335
PRO2 0356,0930,0373,0932,0330,0335,0339,0340,0341,0342,0345,0352,
0358,0371,0895,0896,0897,0898,0899,0900,0901,0902,0903,0904,
0923,0893,0959,1069,1070,1071,1067,1066,1068,0905,0343,0924,
0933,0375,0906,0338,0372,0334,0344,0664,0894
PROCASTER 0905
PROLINE 0373,0357,0333,0376,0397
PROSCAN 0399
PROSON 0350
PROSONIC 0332,0341,0349
PROVIEW 1001
PROVISION 0381,1051
QUADRO 0928
QUARTEK 1077
RADIONETTE 0375
RAITE 0392
RCA 0399,0384
REDSTAR 0894,0965
RELISYS 0923,0895
REOC 0341
ROADSTAR 0350,0383,0382
RONIN 0397
ROTEL 0361
ROWA 0384,0922
RTL 0923
SABA 0373,0915,0360
SAIVOD 0356
SALORA 0375
SAMPO 0341,0386,0923,0895,1051
SAMSUNG 1122,1114,1113,1112,0367,1050,0338,0963,0919
SANSUI 0341,0920
SANYO 0350,0333,1060,0378
SCAN 0380
SCHAUB LORENZ 1095,0894,1089
SCHNEIDER 0350,0352,0356,0373,0351,0894,0333,0380
SCHWAIGER 0349
SCIENTIFIC LABS 0341
SCOTT 0373,0357
SEG 0350,0341,0392
SHARP 1796,0371,0394,1055,0350
SHERWOOD 0391
SHINCO 0384
SHINSONIC 0384
SILVA 0894

SILVA SCHNEIDER 0356
SILVERCREST 0341,1093,1090,1091,1092
SINGER 0341,0382
SKYMASTER 0382,0383
SM ELECTRONIC 0382,0383,0341
SMART 0350,0380
SONY 1081,0363,0987,0988,0989,0402,0986
SOUNDMASTER 0341
SOUNDMAX 0341
SOUNDSTORM 0330
SOUNDWAVE 0351
STANDARD 0373
STRONG 0350
SUNGALE 0953
SUPERVISION 0382,0383
SVA 0349
SYLVANIA 0339
SYNN 0341
TANDBERG 0350
TANGENT 1051
TARGA 0375,1115,0959,0891,1117,0972,1094,1121,0907
TCM 0900,0356,0930,0373,0932,0330,0335,0339,0340,0333,0341,0342,
0345,0352,0358,0371,0923,1119,0343,0924,0933,0338,0372,0334,
0344,0664
TEAC 0368,0333,0341,0384,0375
TECHNICS 0364,0399
TECHNIKA 0356
TECHWOOD 0394,0350,0370
TECO 0923,0895
TEDELEX 0382
TELEDEVICE 1051
TELEFUNKEN 0894,0333
TELETECH 0350
TENSAI 0373,0382
TERAPIN 0943
TEVION 0356,0930,0373,0932,0330,0335,0337,0339,0340,0341,0342,0345,
0352,0358,0371,0891,0892,0895,0896,0897,0898,0899,0900,0901,
0902,0903,0904,0923,0966,0893,0959,1065,1068,1069,1070,1071,
1067,1066,1117,1118,0890,0905,0343,0924,0933,0375,0906,0338,
0917,0918,0372,0334,0344,0664,0894,1064
THETA DIGITAL 0368
THOMSON 0360,0359,0399,1078
TINY 1051
TOKAI 0894,0392
TOKIWA 0380
TOSHIBA 0973,1110,1120,0362,0983,0920,1111
TRANS-CONTINENTS 0356,1051
TRANSONIC 0357

TREDEX 0941
TRUTECH 1075
UMAX 0382
UNITED 0333,0348,0357,0894
UNIVERSUM 0350,0375,0333
VENTURER 0333
VESTEL 1771,0350
VIETA 0380
VOXSON 0383,0356,0382
WALKVISION 0384
WELKIN 0356
WELLTECH 1098,1105,1106
WESTAR 0350
WHARFEDALE 0376,0349,0341,0386
WILSON 0356
X-BOX 0399
XENIUS 0373,0358
XLOGIC 0341
XMS 0894
YAKUMO 0357,1083,0905
YAMAHA 1773,0364,0388,0979,0980,0370
YAMAKAWA 0397,0392,0382
YUKAI 0383
ZENITH 0375,0907
Audio Amplifiers. Tuners. Receivers
CENTRUM 0692
CRITERION 0775
CYBERCOM 0841,0775,0776
CYBERMAXX 0841,0775,0776
CYTRON 0841,0775,0776
DENON 1048,0779,0781
DUAL 0841,0775,0797
ELTA 0667,0668
GRUNDIG 0697,0698,0727
HARMON/KARDON 0682
KENWOOD 0761
LIFETEC 0841,0775,0776
LINN 0857
MARANTZ 0727
MEDION 0841,0775,0776
MICROMAXX 0841,0775,0776
MICROSTAR 0841,0775,0776
NAD 0735,0736,0737,0738,0799,0800
NUVO 0862,0863,0864,0865
ONKYO 0785,0792,0793,0826
PHILIPS 0734,0846,0727
PRO2 0841,0775,0776
SANSUI 0727

SCHNEIDER 0791
SHERWOOD 0782
SONY 0739,0740,0755,0757,0758,0759,0760
TCM 0841,0775,0776,0806
TEAC 0794,0796
TECHNICS 0764,0777,0788
TEVION 0775,0776,0815,0817,0841
THEORIE & ANWENDING 0805
THOMSON 0842,0766
XANTECH 0867
YAMAHA 0883,0882,0839,0838,0724,0752,0770,0771,0772
Audio Tape Players
AIWA 0790
DENON 0780
GRUNDIG 0729,0698
HARMON KARDON 0681
KENWOOD 0761
MAGNAVOX 0729
MARANTZ 0729
NAD 0799
ONKYO 0784
PHILIPS 0729
SANSUI 0729
SHERWOOD 0783
SONY 0754,0755,0756
TEAC 0794
TECHNICS 0764,0777,0786
THOMSON 0842
YAMAHA 0724,0772

AUX1

MINI Systems

AIWA 0773,0774
CYBERCOM 0852,0858,0704,0745,0808,0810,0820,0819
CYBERMAXX 0852,0858,0704,0745,0808,0810,0811,0812,0820,0819
CYTRON 0852,0858,0704,0745,0808,0810,0811,0812,0820,0819
DUAL 0852,0858,0704,0745,0797,0820,0819
E-BENCH 0811
ELTA 0693,0745
GRUNDIG 0707
INSIGNIA 0731
INTERTRONIC 0811
LIFE 0879,0823,0811
LIFETEC 0879,0823,0852,0858,0704,0745,0808,0810,0811,0812,0820,0819
MEDION 0879,0823,0731,0728,0852,0858,0704,0745,0808,0810,0811,0812,
0820,0819
MICROMAXX 0852,0858,0704,0745,0808,0810,0811,0812,0820,0819

MICROSTAR 0852,0858,0704,0745,0808,0810,0811,0812,0820,0819

PIONEER 0753

PRO2 0852,0858,0704,0745,0808,0810,0811,0812,0820,0819

SAMSUNG 0768

SHARP 0768

SILVERCREST 0828,0811,0829,0868

SONY 0741

TCM 0879,0880,0852,0858,0704,0745,0808,0810,0811,0820,0819,0694,
0823,0824,0825

TEVION 0879,0823,0852,0858,0704,0745,0808,0810,0811,0812,0820,0819,
0821,0822

WELLTECH 0881,0852,0810,0820,0819,0694,0803,0811,0827

Misc.

APPLE IPOD 0885

AUDIO COMBI 0844

CAR RADIO 0861

CDR 0847,0675

DBS 0845

INTERNET RADIO 0670

IPOD 0884

SWITCH BOX 0684

VIDEO CD 0840